



Installing PostureFit™

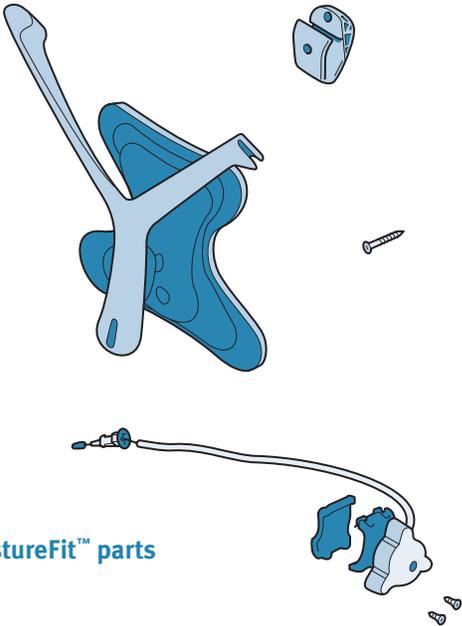


PostureFit™ parts

- required tools**
- T-15 Torx head screwdriver
 - 2.5MM Hex head screwdriver
 - #2 Phillips head screwdriver



1. Remove lumbar support

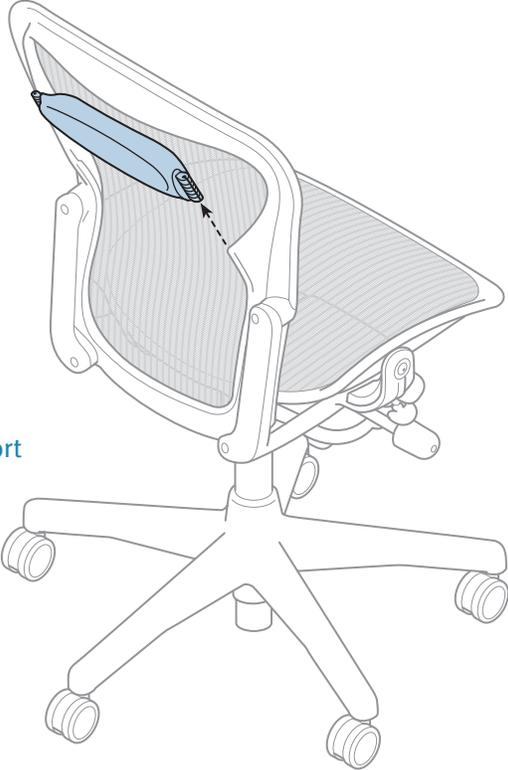

Installing PostureFit™

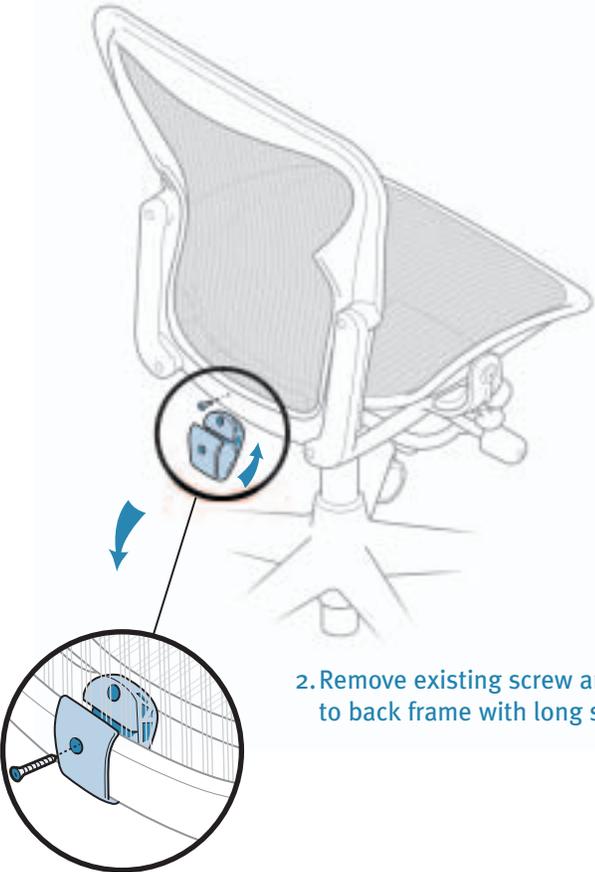


2. Remove existing screw and install clip to back frame with long screw from kit

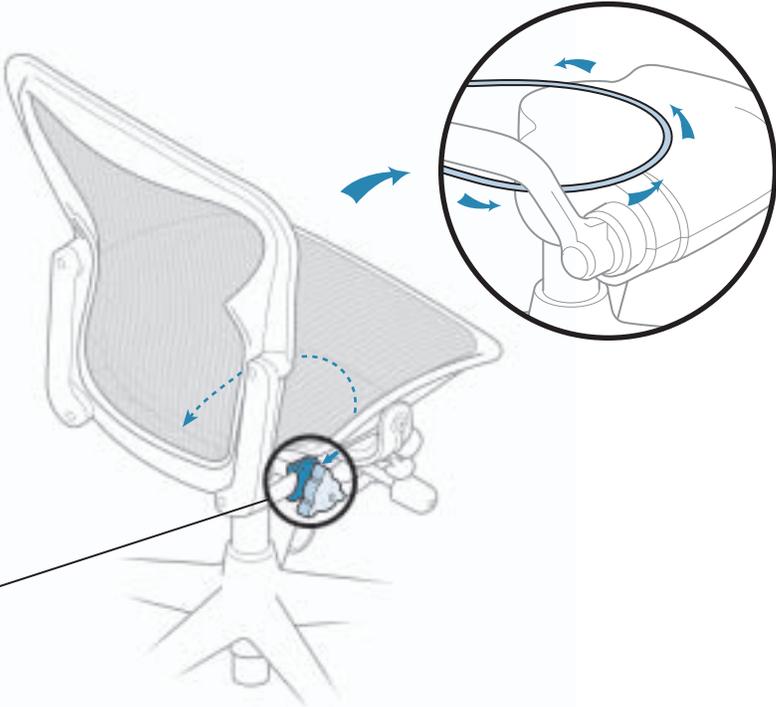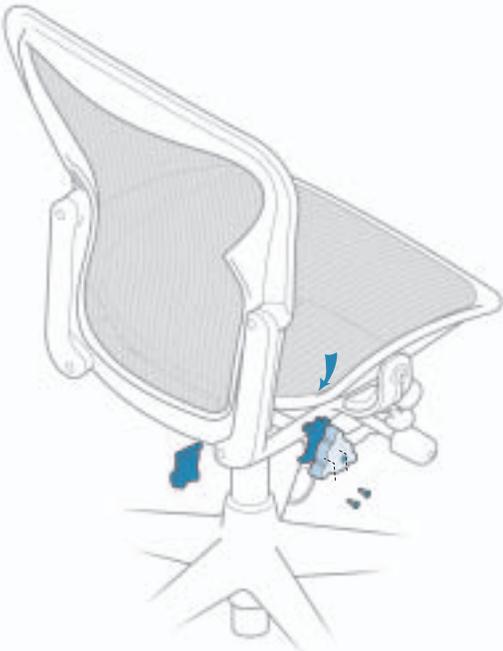

3. Attach control mechanism to right swing arm

Installing PostureFit™

4. Thread cable end through clip and Pellicle®

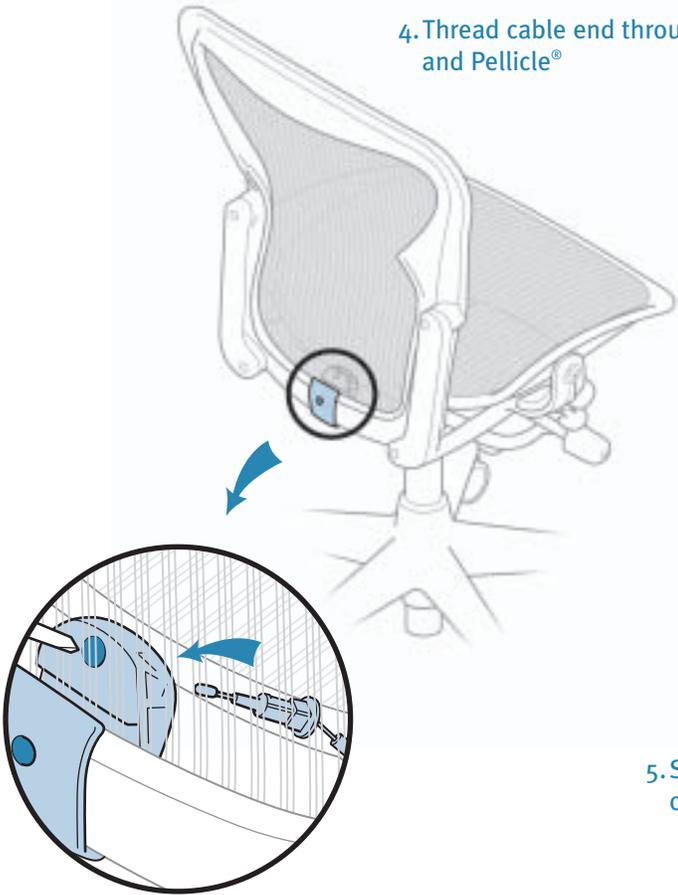

5. Slide wishbone assembly onto back frame



6. Attach cable end to wishbone assembly

